




**FRONT RUNNER**  
VEHICLE OUTFITTERS

# INEOS GRENADIER MOUNTING LEG ASSEMBLY 225MM PAIR

ENG

LASS047

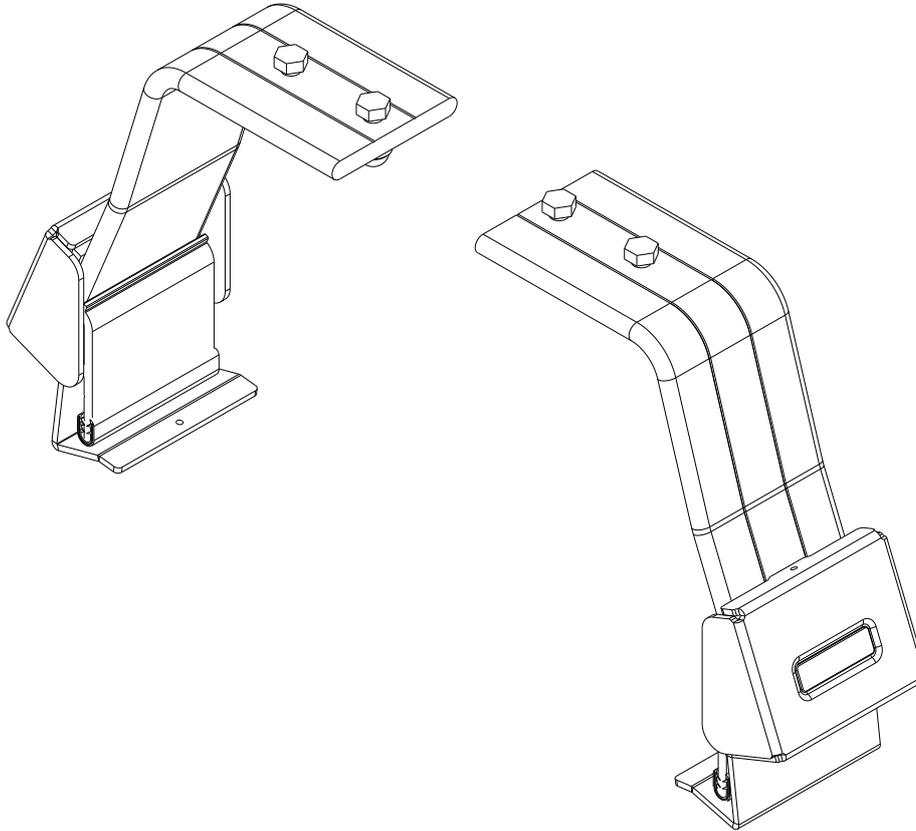

## READ ME !

Thank you for purchasing a Front Runner Leg Assembly.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

## IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

# 1

## GET ORGANIZED

### IN THE BOX

1	2 X	Leg
2	2 X	Gutter Clamp
3	2 X	M8 Schnorr Washer
4	2 X	M8 x 30 Button Head Bolt
5	4 X	M8 x 25 Hex Bolt
6	4 X	M8 Nyloc Nut
7	4 X	M8 Nut Cap

### TOOLS NEEDED




5mm



13mm




FIGURE 1.1 - LEG ASSEMBLY

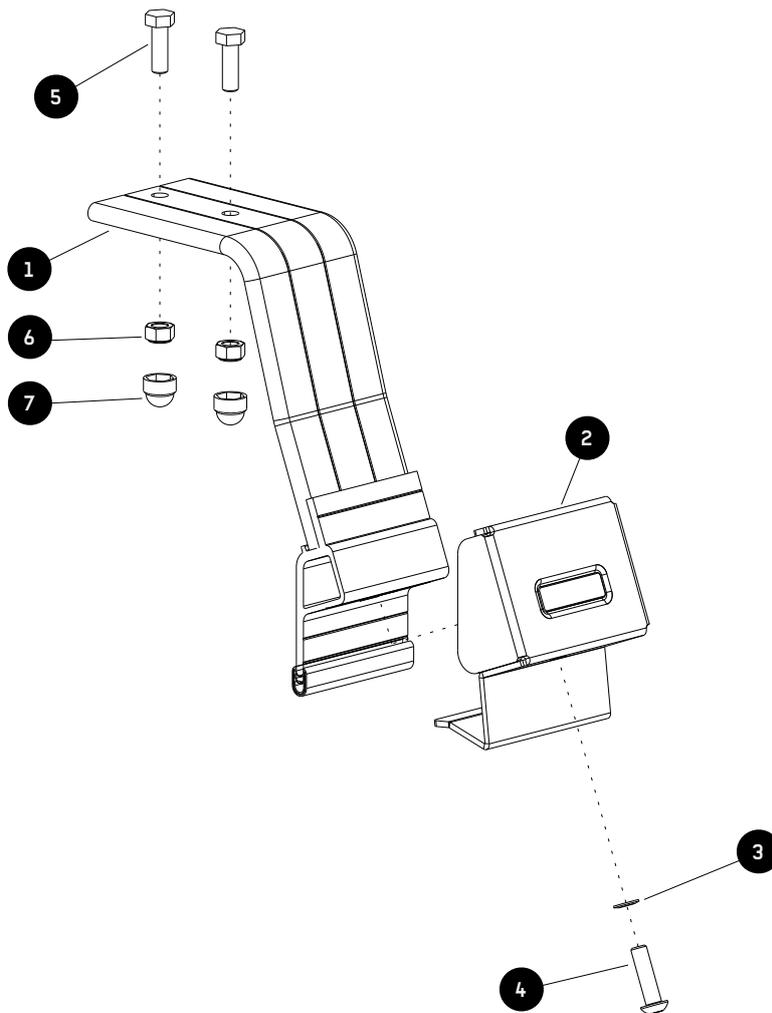

## 2 FIT AND SECURE

2.1

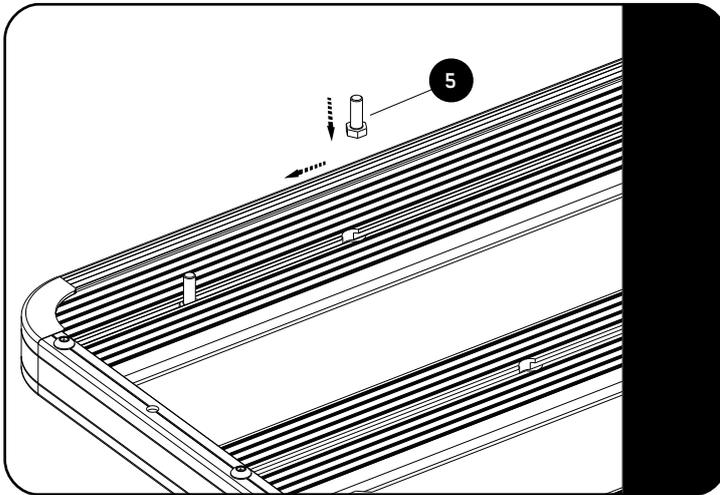


**RECOMMENDED SPACING BETWEEN LEGS OR FEET ARE 3 SLATS.**

**SPACING MAY NOT EXCEED 4 SLATS.**




Slide two M8 x 25 Hex Bolts (Item 5) into the Slats machined slots on the underside of the rack.

2.2

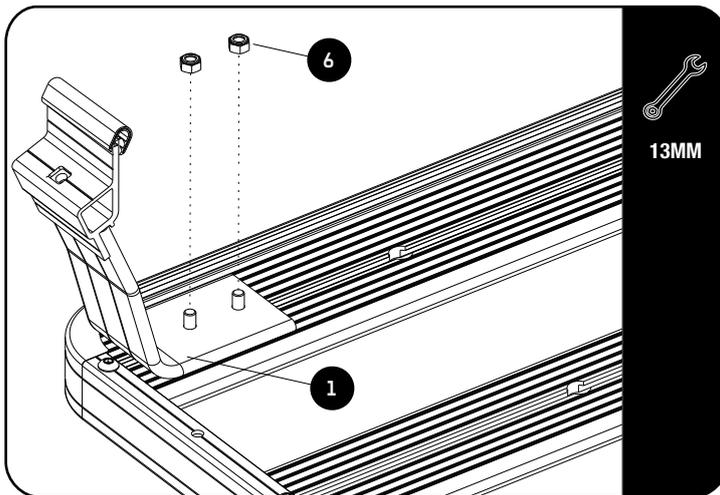

Loosely fit the Legs (Item 1) using the M8 Nyloc Nuts (Item 6).

2.3

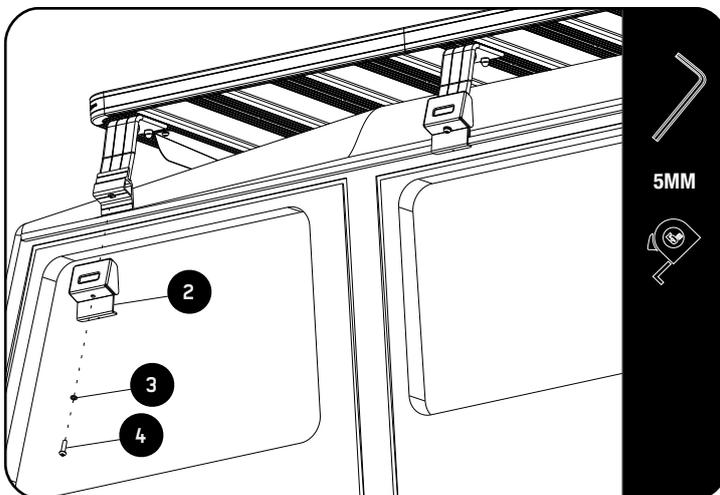

Find a suitable position to place the feet on the gutter.

Secure the Gutter Clamps (Item 2) using M8 x 30 Button Heads and M8 Scnorr Washers (Items 3 & 4).

Using a tape measure, centralize the rack on the roof of the vehicle.

Place M8 Nut Caps (Item 7) on all the Nyloc Nuts after fully tightening.



**Tightening Torque:**

**M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb**

3

### **FINISH**

Congratulations! You did it. Take a step back and admire your work!

4

### **INSTALL OTHER VEHICLE AND RACK ACCESSORIES**

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

