**READ ME !** 

Thank you for purchasing a Front Runner Telescopic Ladder Support Bracket .
Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.
Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! 

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	2 X	Ladder Brackets
2	4 X	M8 X 20 Hex Head Bolt
3	4 X	M8 x 16 x 1.6 SS Flat Washer
4	4 X	M8 Nyloc Nut
5	4 X	M8 Nut Cap


TOOLS NEEDED



13mm


Torque Wrench

A



Side mount fastener configuration


B



Rear mount fastener configuration

FIGURE 1.1


Note : This bracket works with the Slimline II, Slimsport & Van Racks.

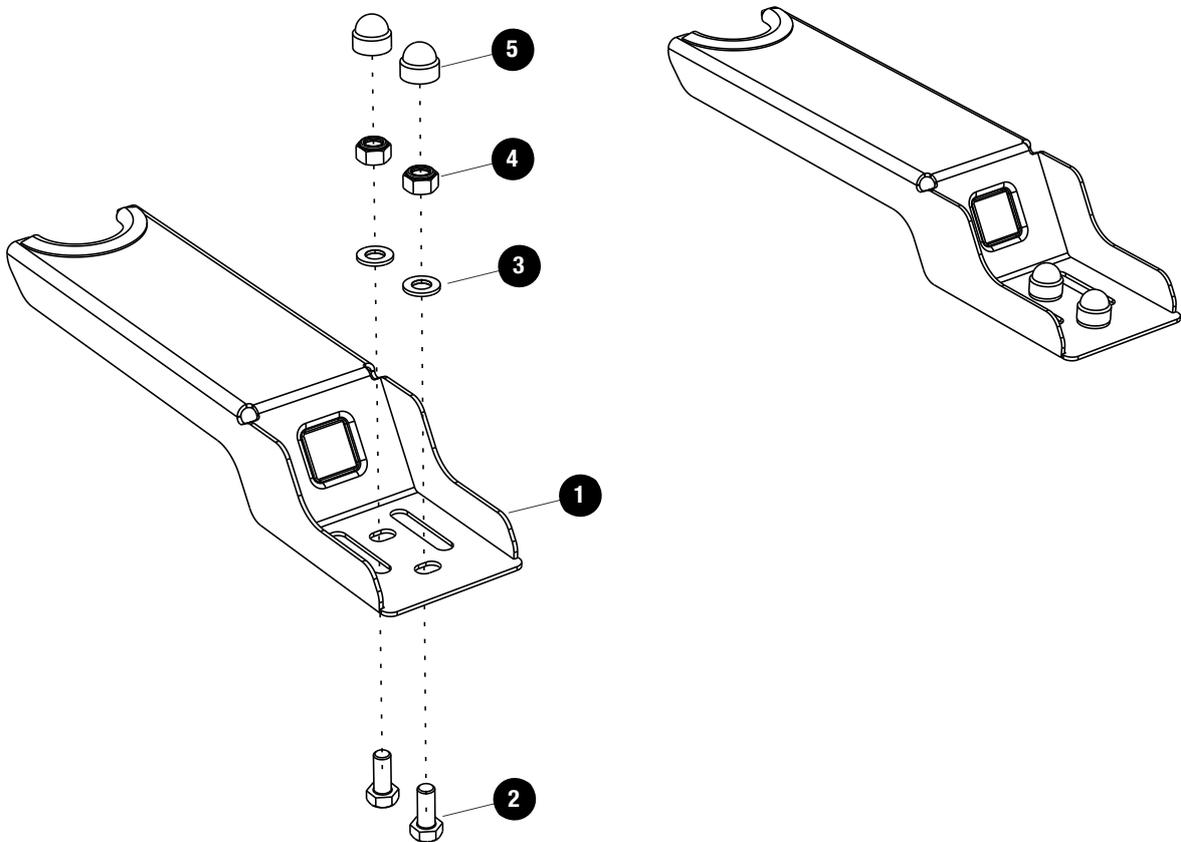

2

FIT AND SECURE

2.1

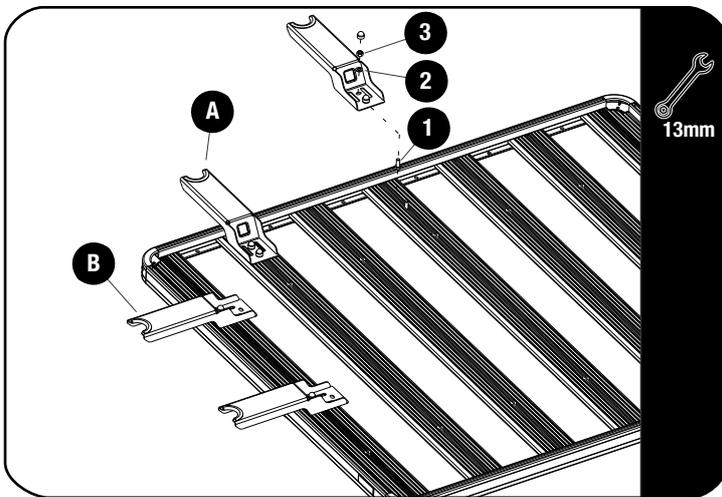

Decide where on the rack you would like to fit your ladder support brackets.

A - Side mount

Slide M8 Hex Bolts (Item 1) into the chosen slats. The Brackets should be fitted two slats apart for side mount configuration as shown in Fig 2.1. Loosely fit the Brackets using the M8 Hex Bolts (Item 1), M8 Washers (item 2) and M8 Nyloc Nuts (Item 3) as shown.



Note:

When mounting the Ladder Support Brackets in the side mounting configuration, ensure they do not protrude past the wing mirrors.

B - Rear mount


Slide M8 Hex Bolts (Item 1) into the rear slat. Loosely fit the Brackets using the M8 Hex Bolts (Item 1), M8 Washers (item 2) and M8 Nyloc Nuts (Item 3) as shown.



Note:

When mounting the Ladder Support Brackets in the rear mounting configuration, ensure there is enough clearance for your rear door to open.

2.2

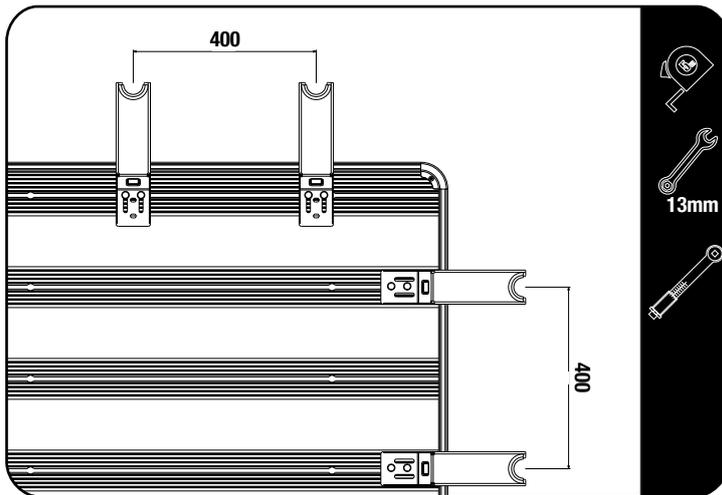

Space the Brackets 400mm apart centre to centre as shown in the illustration and tighten the M8 Nyloc Nuts. Add the M8 Nut Caps to the M8 Nyloc Nuts.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    