

READ ME! 

Thank you for purchasing Front Runner Wolf Pack Foam Dividers.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! 

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX


1	3 X	Foam Dividers 950mm x 178mm x 12mm
2	1 X	Craft Knife
3	1 X	Plastic Clip for Wolf Pack Dividers (Set of 10)

TOOLS NEEDED



Ruler / Straight Edge


FIGURE 1.1

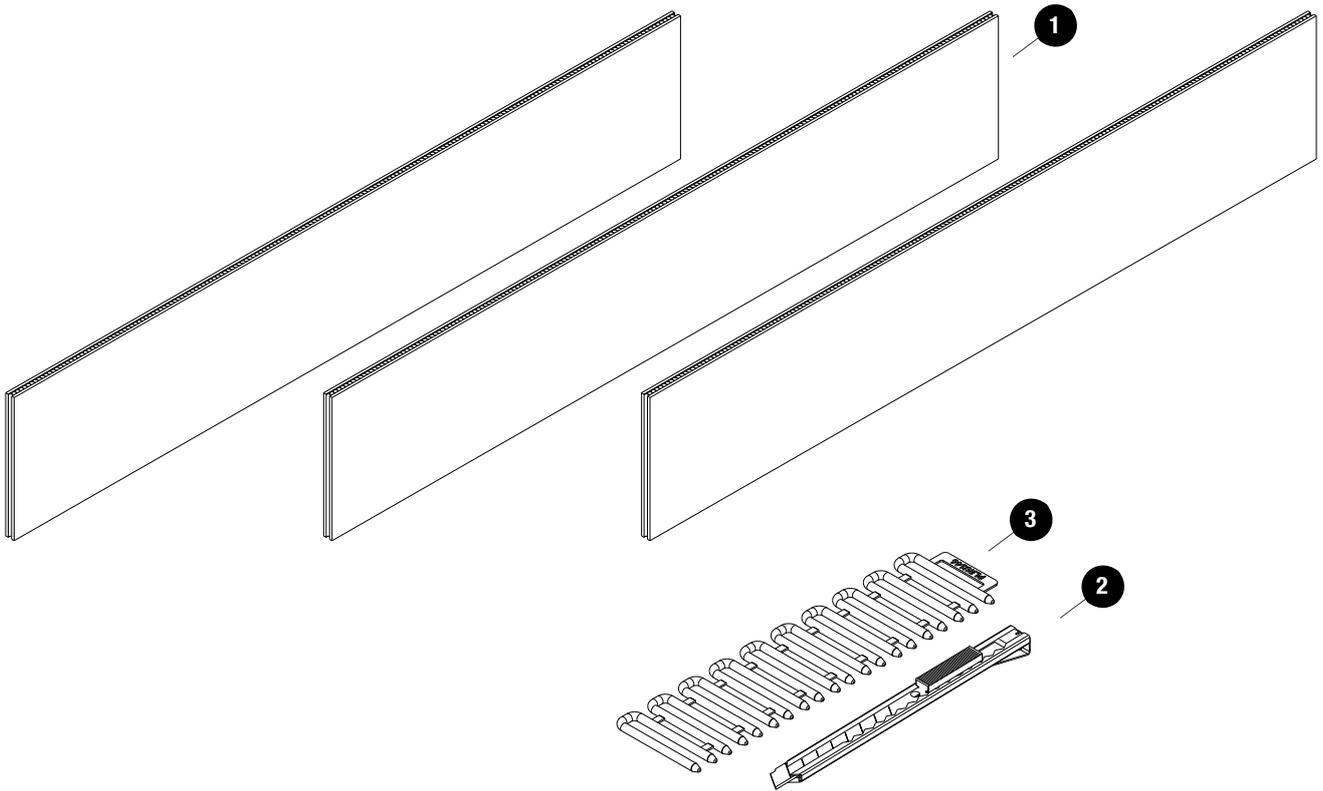

2

PREPERATION AND ASSEMBLY

2.1

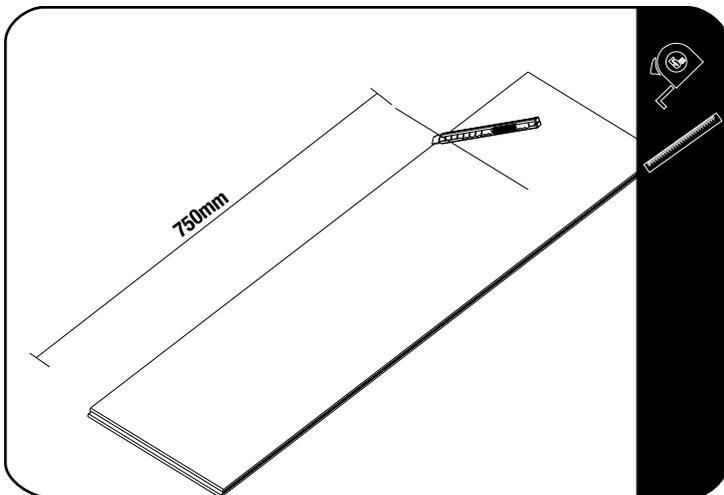


Find a suitable surface to cut on.

Measure 750mm, and using a straight edge, cut two of the Dividers for the box perimeter.




TIP: Place masking tape across the Divider and mark top and bottom, draw a line to ensure the cut will be straight.

2.2

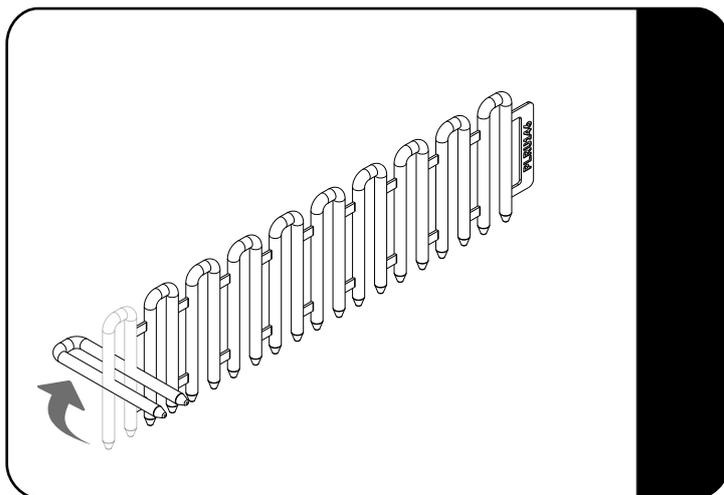

Twist the Clips (Item 3) to break them free.

2.3

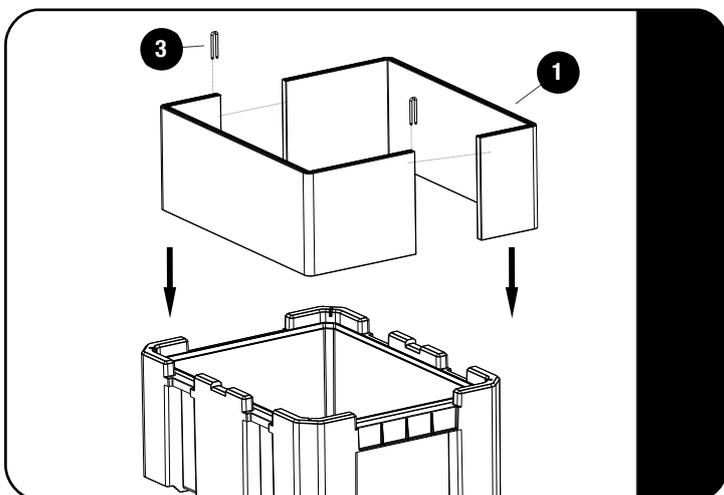

Bend and crease two of the Dividers to create the perimeter for the Wolf Pack.



Both Dividers must be bent and creased the same.




Align and connect the Dividers (Item 1) using two of the clips (Item 3).

3

ASSEMBLY

3.1

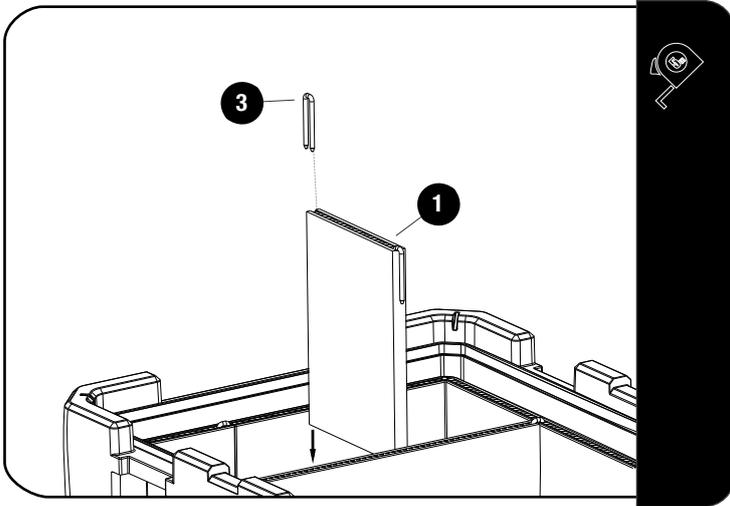

Decide how you would like to divide your Wolf Pack and cut the Foam Divider (Item 1) using the Craft Knife (Item 2).

Connect the Dividers (Item 1) using the Plastic Clips (Item 3) as shown in 3.1.

4

FINISH

Congratulations! You did it. Take a step back and admire your work!

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    