











**FRONT
RUNNER**
↗ DOMETIC



Slimline II Tray

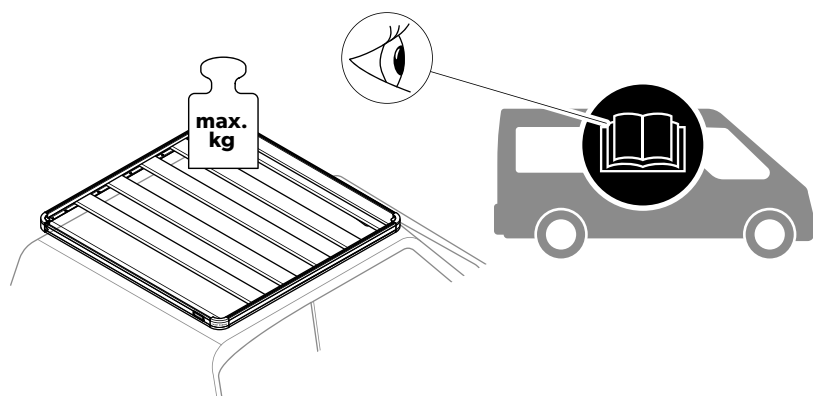


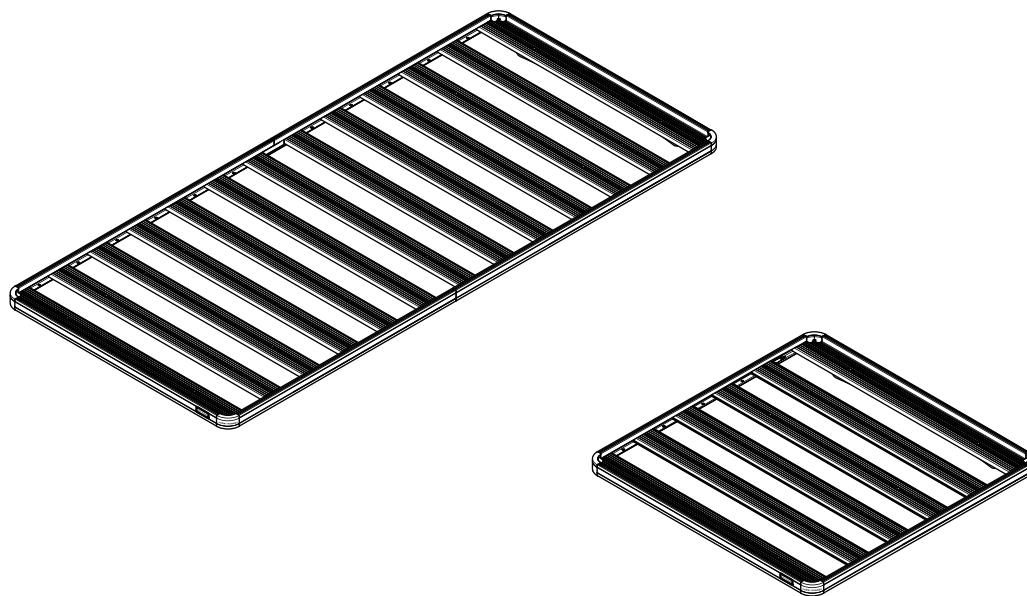

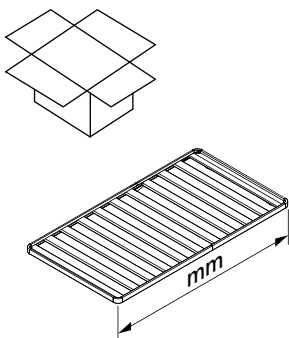
		1	2	3	4	5	6	7	8	9	10	11
												
3 Slat	550	2x	-		1							6
4 Slat	752				2							8
5 Slat	954	-			3		-	-	-	-		10
6 Slat	1156				4							12
7 Slat	1358				5							14
8 Slat	1560				6							16
9 Slat	1762	2x			7	4x						18
10 Slat	1964				8							20
11 Slat	2166	2x			9		2x	2x	4x	4x		22
12 Slat	2366				10							24
13 Slat	2570	-	4x		11							26
14 Slat	2772				12							28

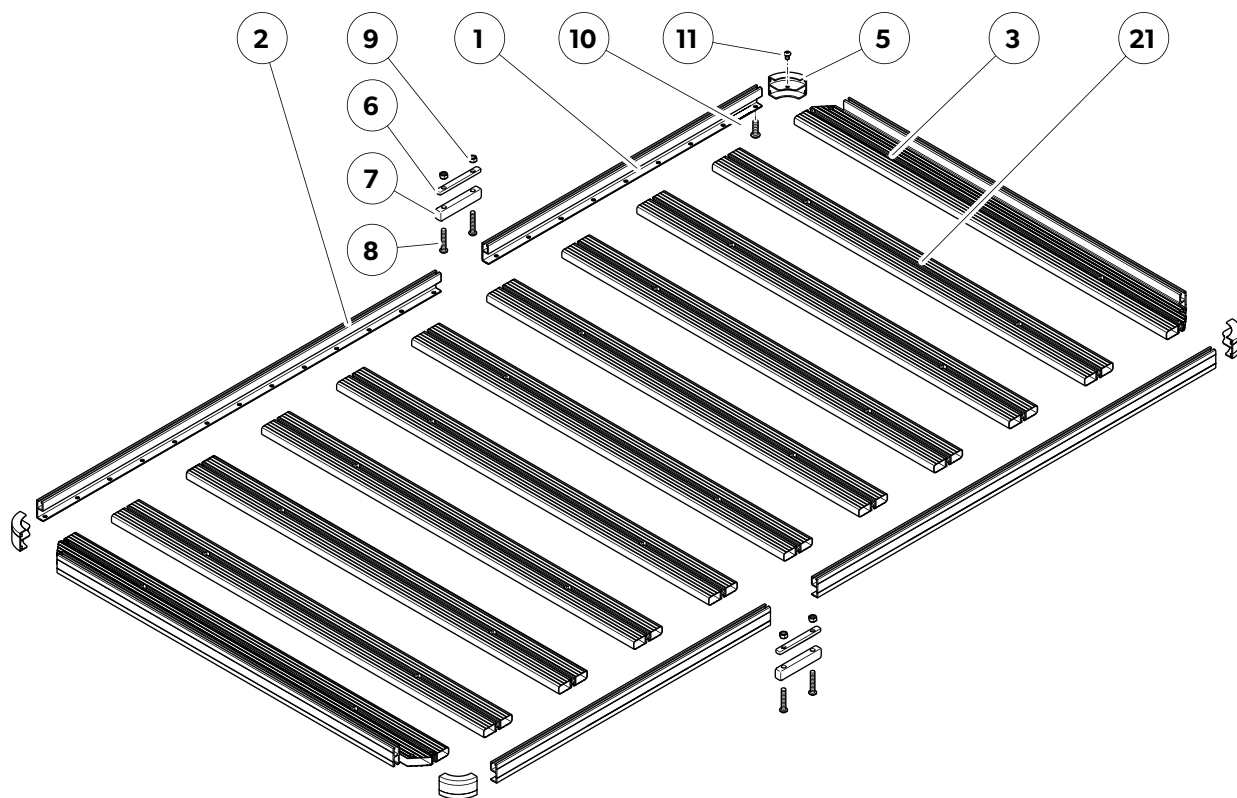


12	13	14	15	16
4x	4x	4x		
M8 x 12	M8	M8		
				

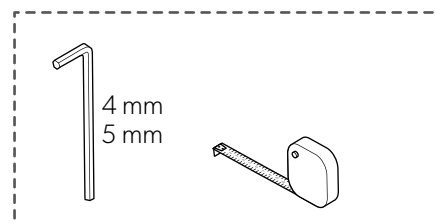


12 Slat / 13 Slat
14 Slat

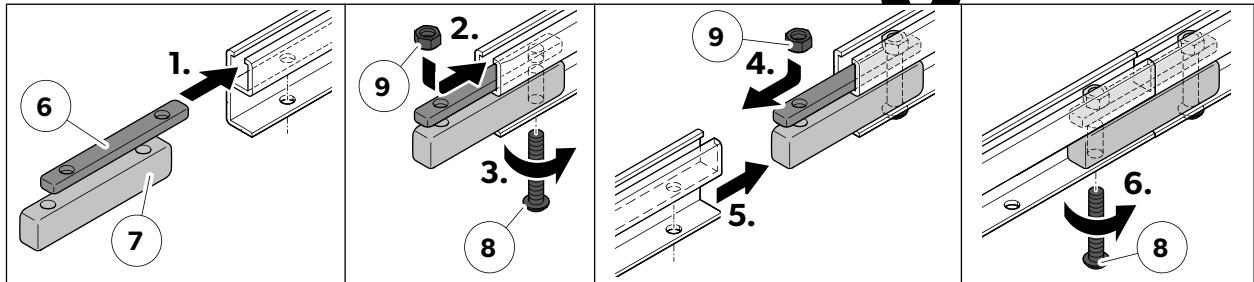


3

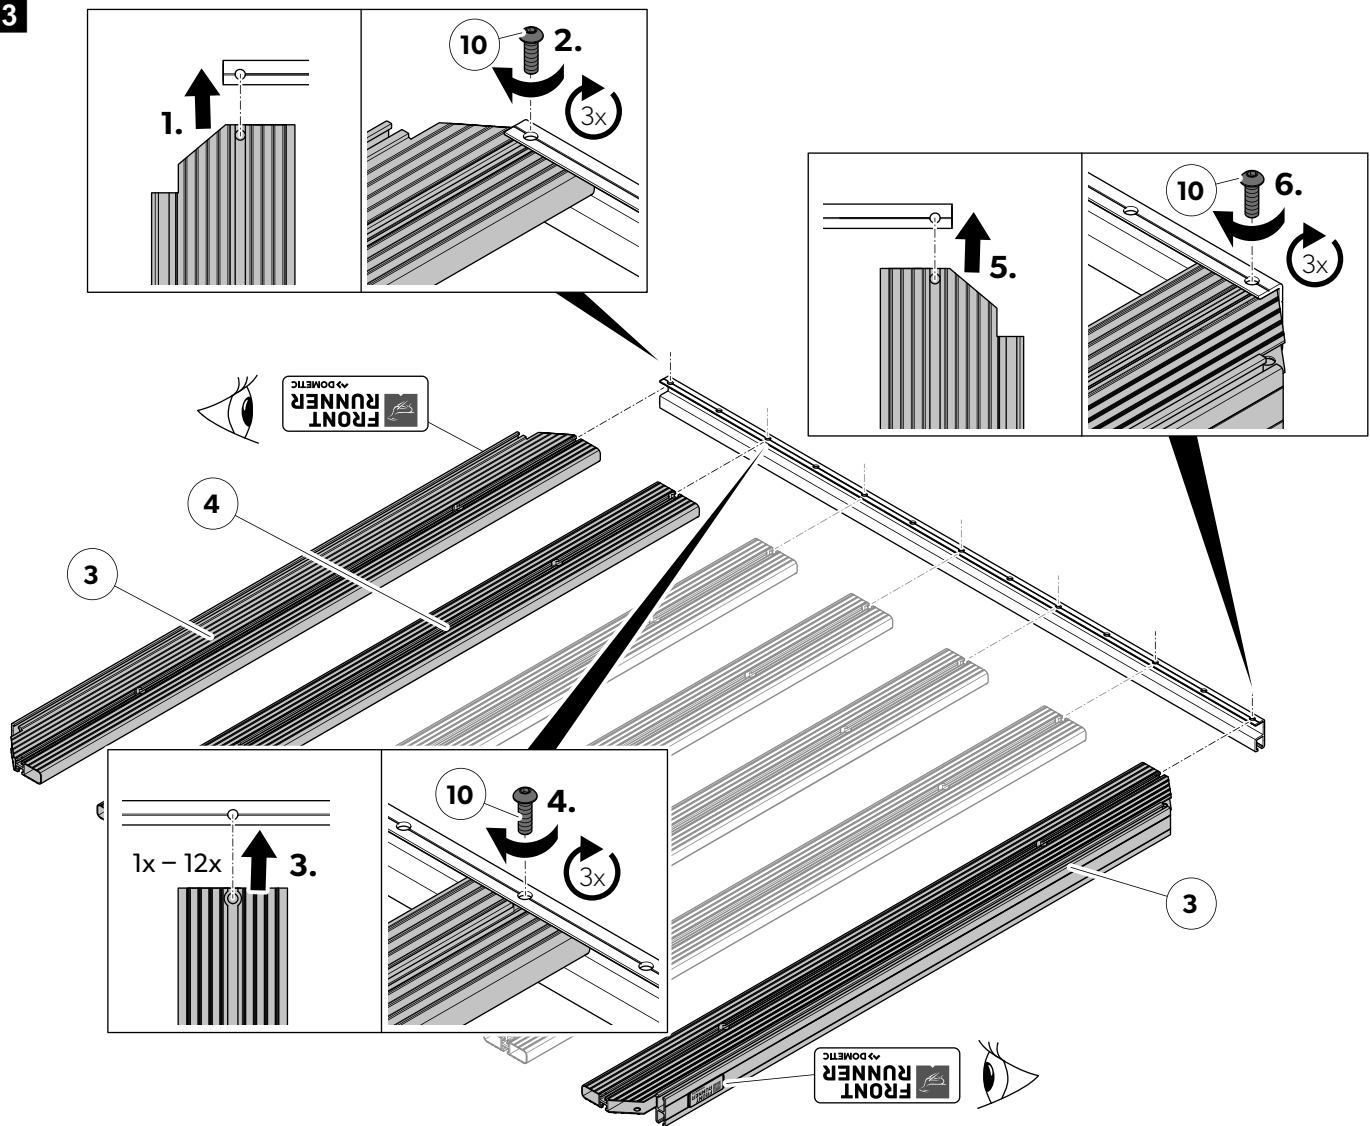


4

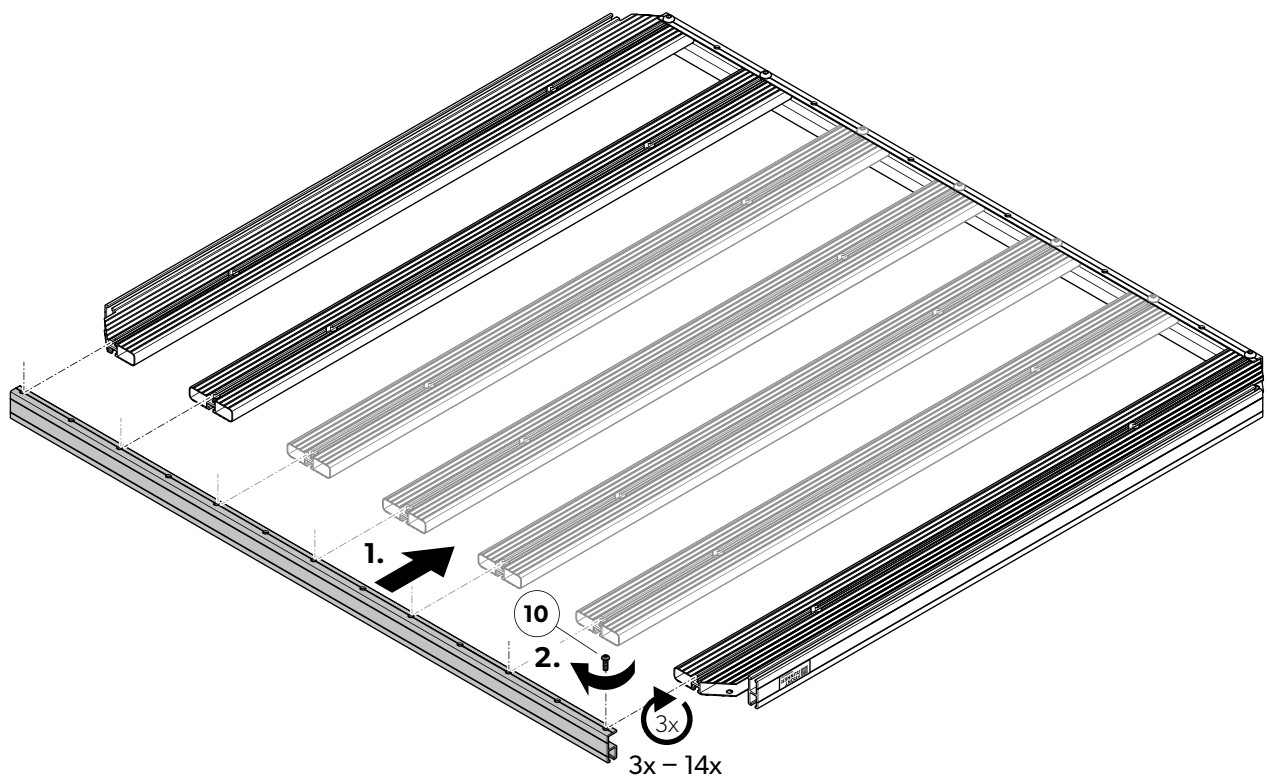

5


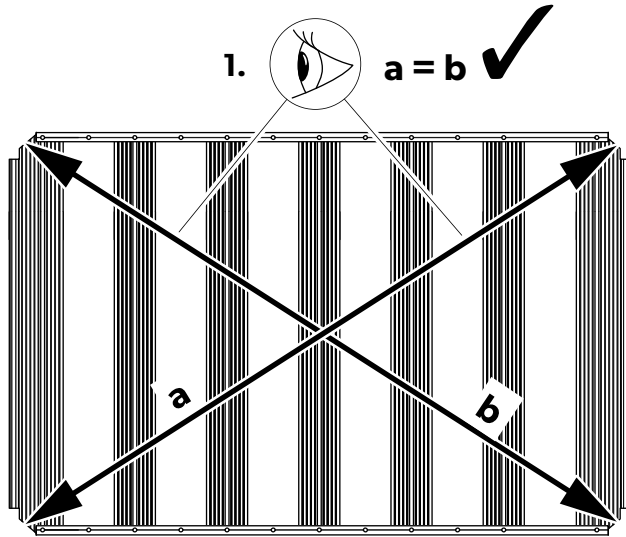


2.

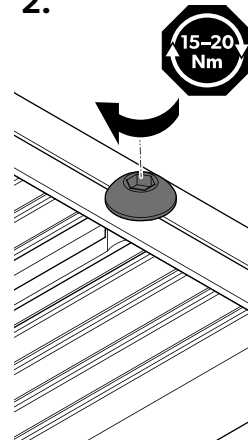


3 Slat	6x
4 Slat	8x
5 Slat	10x
6 Slat	12x
7 Slat	14x
8 Slat	16x
9 Slat	18x
10 Slat	20x
11 Slat	22x
12 Slat	24x
13 Slat	26x
14 Slat	28x


6

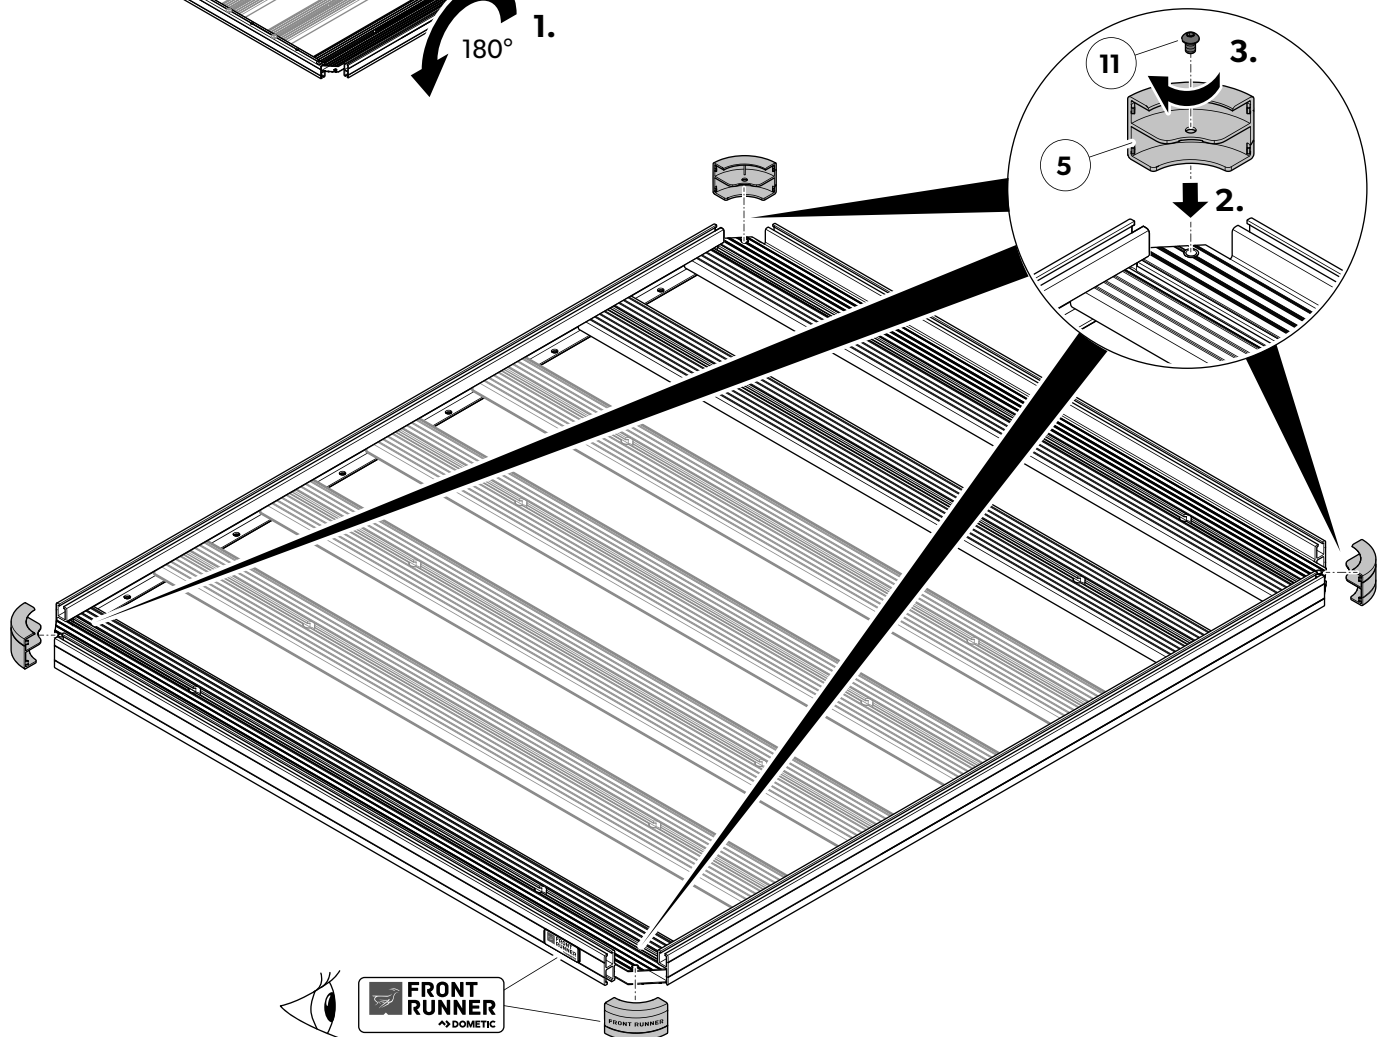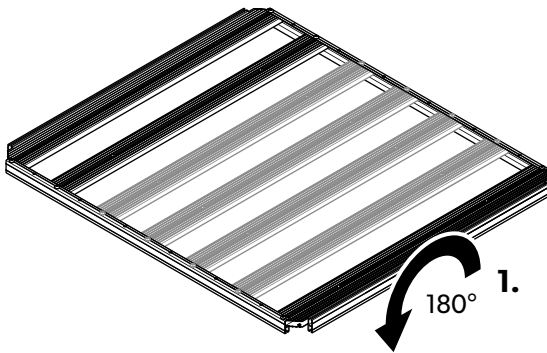

7




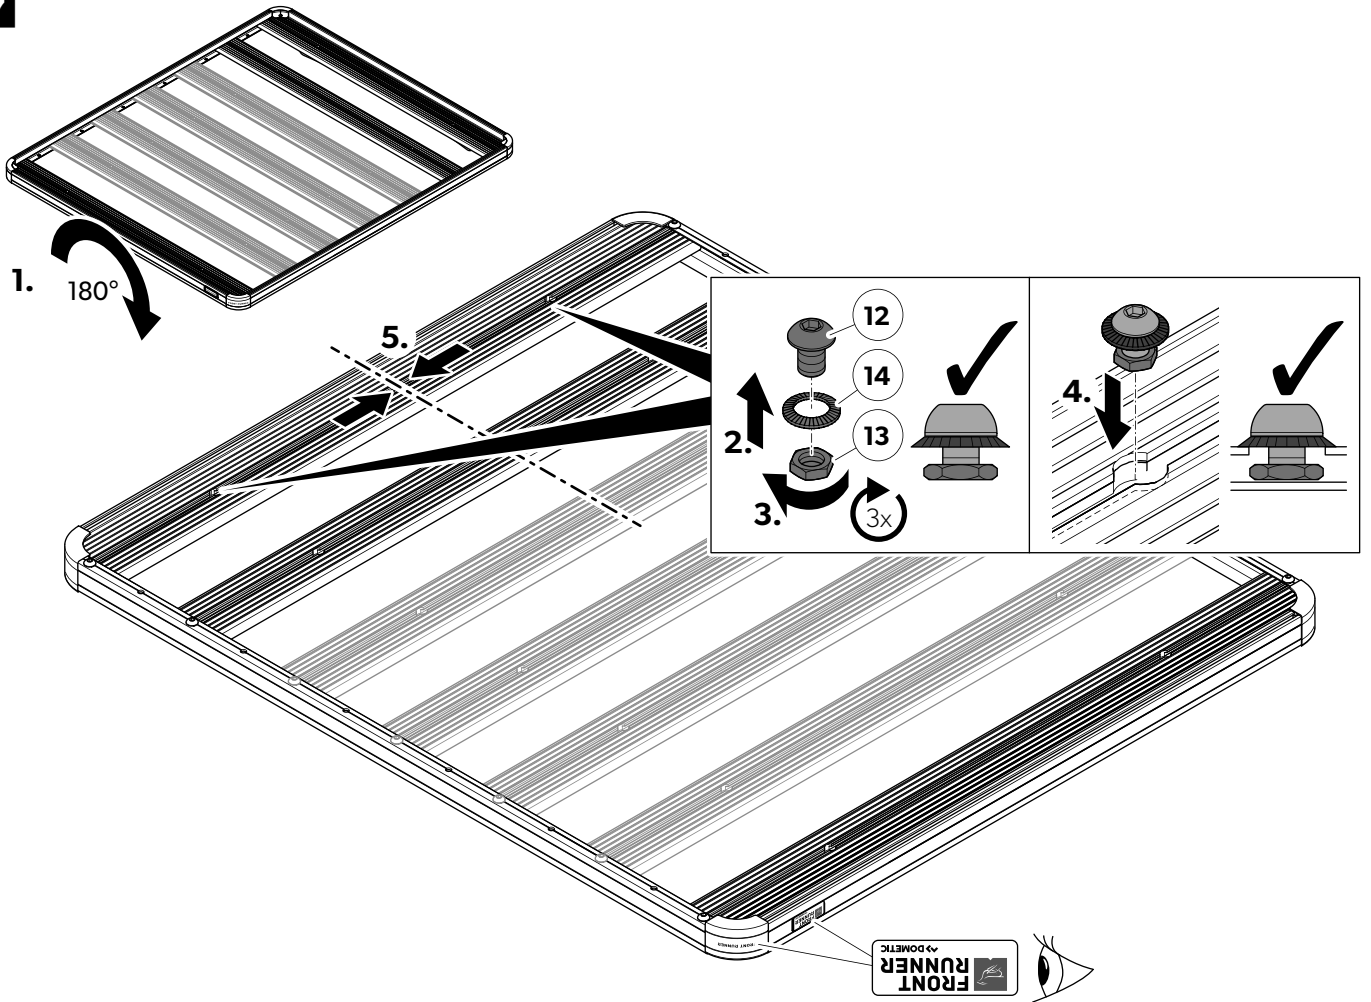


8

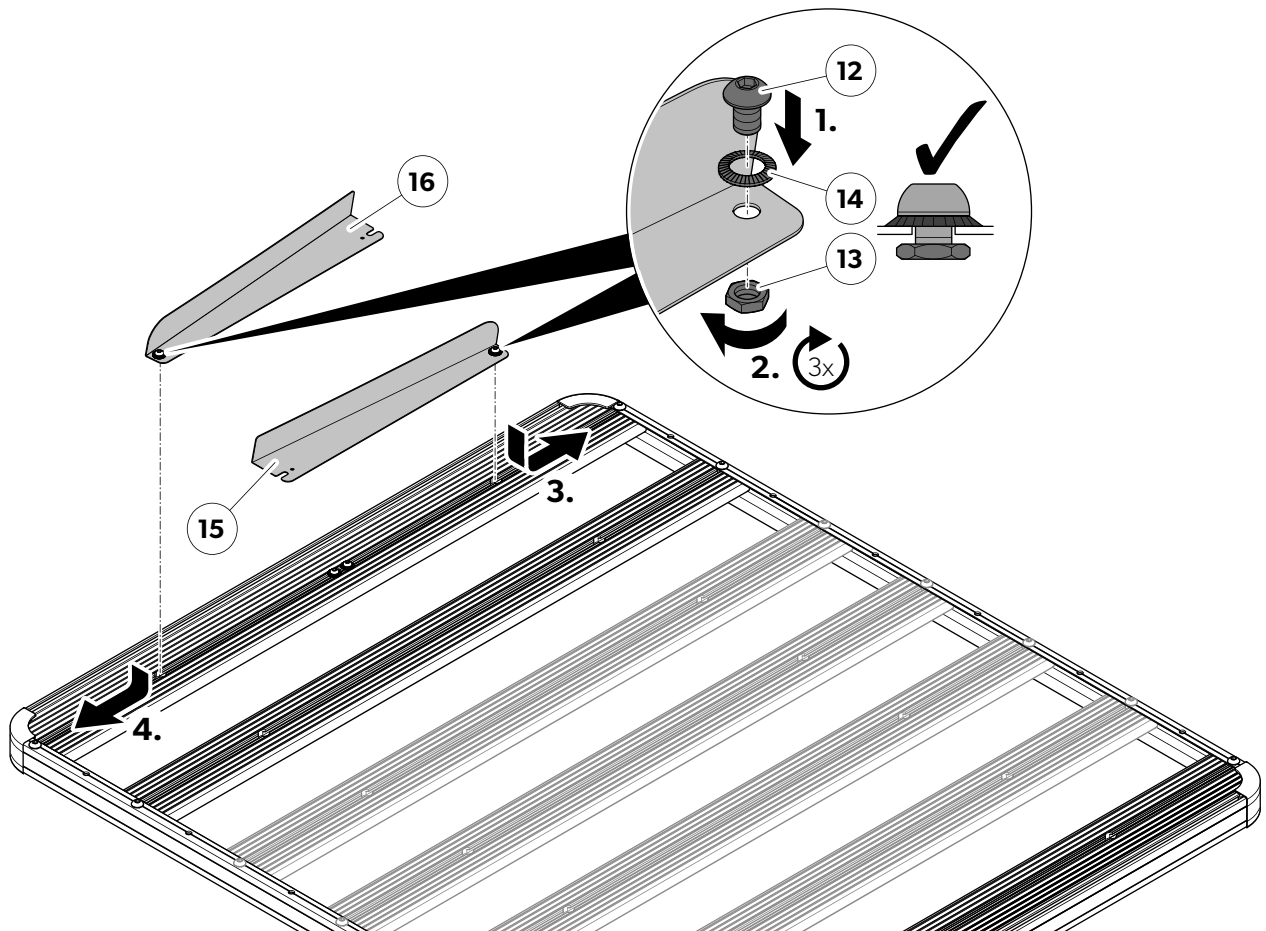

The diagram illustrates the three-step process of attaching the floorboard to the frame:

- 1.** Insert the floorboard into the frame.
- 2.** Tighten the screws.
- 3.** Tighten the screws.

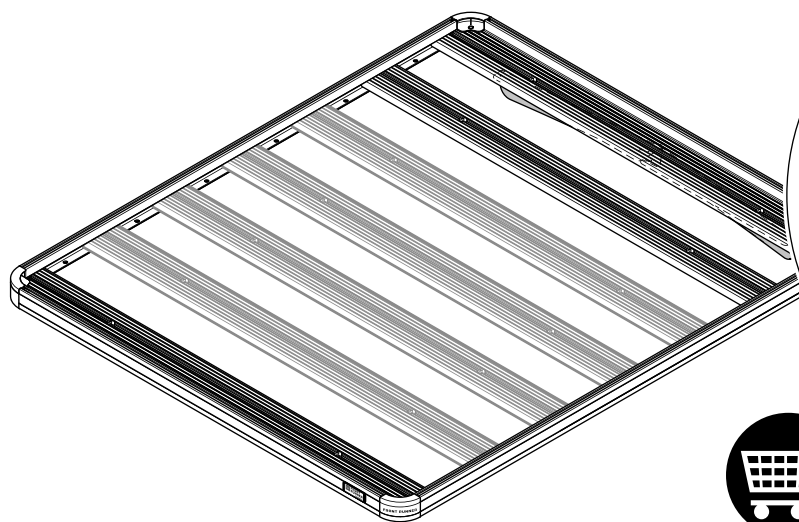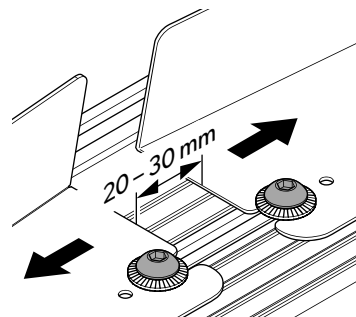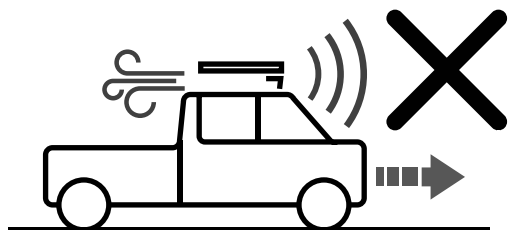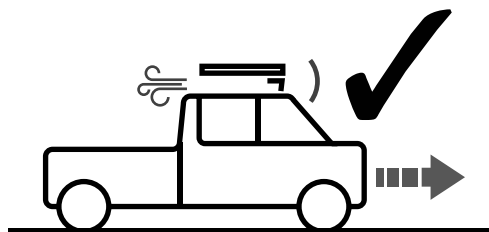

SKU: RRAC012



<http://qr.dometic.com/bfz9ll>



dometic.com

YOUR LOCAL DEALER

dometic.com/dealer

YOUR LOCAL SUPPORT

dometic.com/contact

YOUR LOCAL SALES OFFICE

dometic.com/sales-offices